


LINCUS

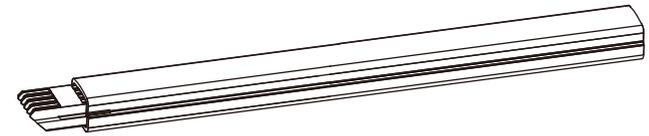

INSTRUCTION MANUAL

 
SERIES: LINCUS

Read these instructions completely and carefully.

ATTENTIONS

- Read the instruction carefully before installation, non-observance of this instruction may cause damage to the fixture or hurt to human body. The installation must be carried out by a qualified electrician in accordance with local or national codes.
- Cut off the power supply before installation and maintenance !
- Regularly check the luminaire , the light source , the LED power supply, the cord and other accessories. Any constructive change of the product shall not be permitted. If any part is damaged, the product should not be used, please contact the manufacturer.
- If any part is damaged, the product should not be used.
- Keep this instruction manual handy for future use
- The light source of these product are non-changeable light diodes(LED).
- Do not disassemble the product, as the light diode can cause damage to the eyes.
- The production is only for indoor and dry location.
- Use only with SELV power supply or class 2 power supply (For USA market)
- Wasted PCB during transit, delivery, use and scrap disposal can cause certain environment damage. Please handle it according to "waste electronic products disposal rules" locally.

Dimensions: (mm/inch)



Specifications :


Mode	Rated Input	Length	Power	ta
LINCUS-L4-24V-BC	24VDC	120mm(4.72")	0.8W	-20°C~35°C
LINCUS-L10-24V-BC	24VDC	300mm(11.81")	2W	-20°C~35°C
LINCUS-L20-24V-BC	24VDC	600mm(23.62")	4W	-20°C~35°C
ATLAS-L6-24V	24VDC	150mm(5.91")	1W	-20°C~35°C
ATLAS-L6-24V	24VDC	300mm(11.81")	2W	-20°C~35°C
ATLAS-L6-24V	24VDC	600mm(23.62")	4W	-20°C~35°C

Components:




LAMP x1



Accessories:

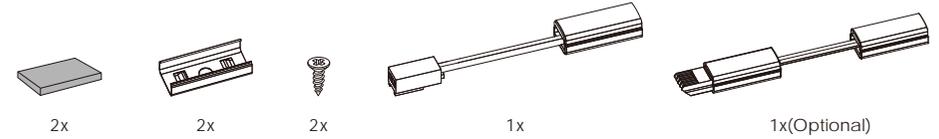


Tools:

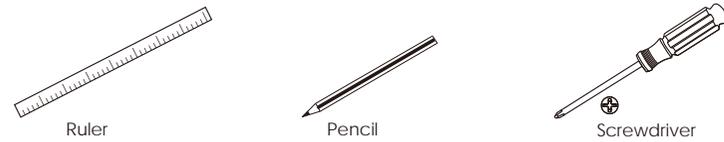


Double-sided adhesive installation: used on smooth surface

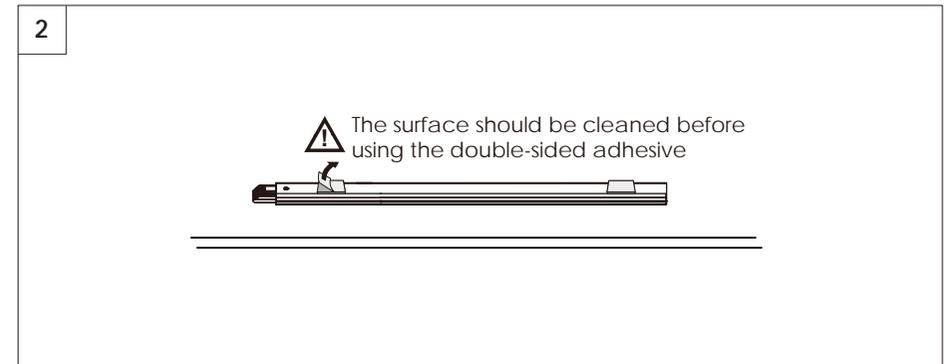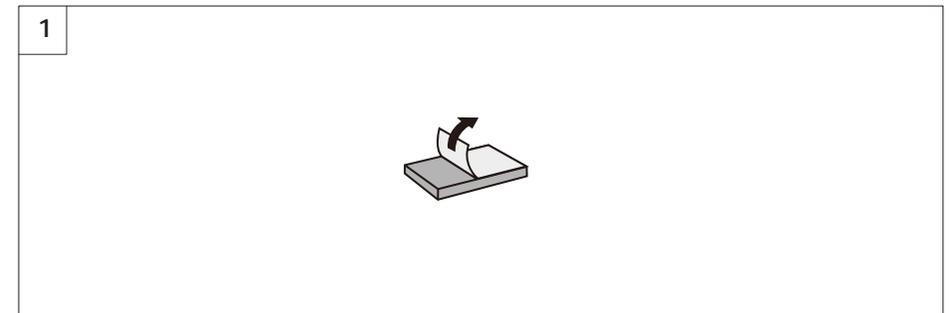


3

 


4

 

5

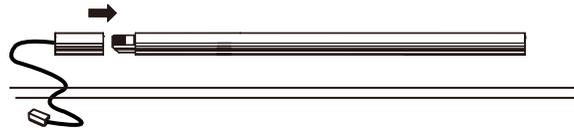

6

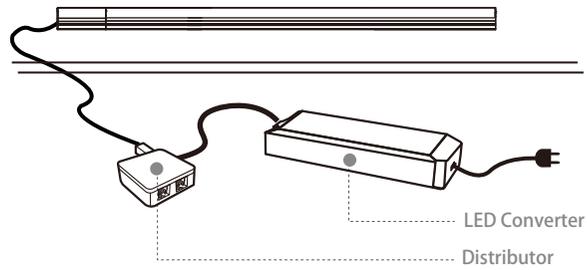


7




Mount clip installation:


1

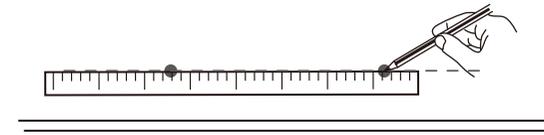

2

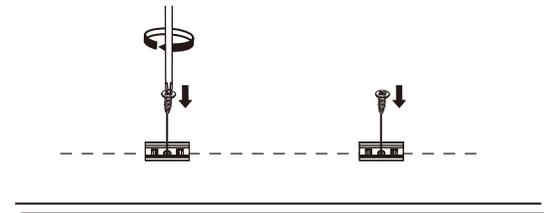


3

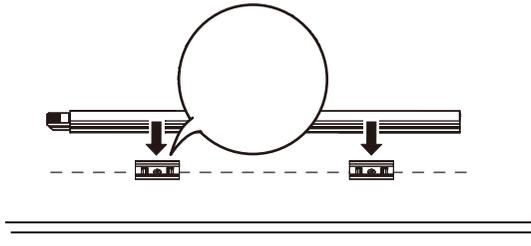


4



5

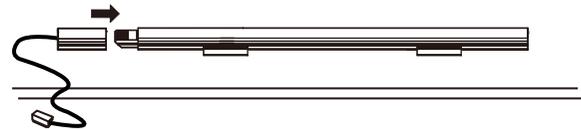

6

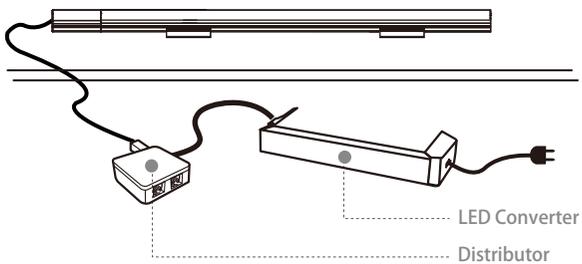

LED Converter
Distributor


7



⚠ Connection Diagram:



Mode	Max. Linkabe No.	Max.wattage allowed for interlinking
LINCUS-L4-24V-BC	37	30W
LINCUS-L10-24V-BC	15	
LINCUS-L20-24V-BC	7	
ATLAS-L6-24V	20	
ATLAS-L6-24V	10	
ATLAS-L6-24V	5	

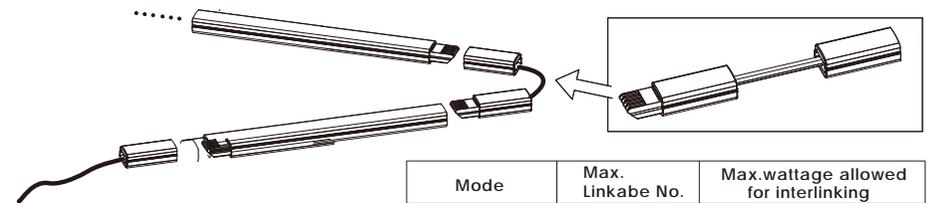

Mode	Max. Linkabe No.	Max.wattage allowed for interlinking
LINCUS-L4-24V-BC	37	30W
LINCUS-L10-24V-BC	15	
LINCUS-L20-24V-BC	7	
ATLAS-L6-24V	20	
ATLAS-L6-24V	10	
ATLAS-L6-24V	5	

SELF Electronics Co.,Ltd.
No. 1345 JuXian Road, Ningbo Hi Tech Park, Ningbo, China 315103